


COATED WHIPBLOCK USAGE INSTRUCTIONS

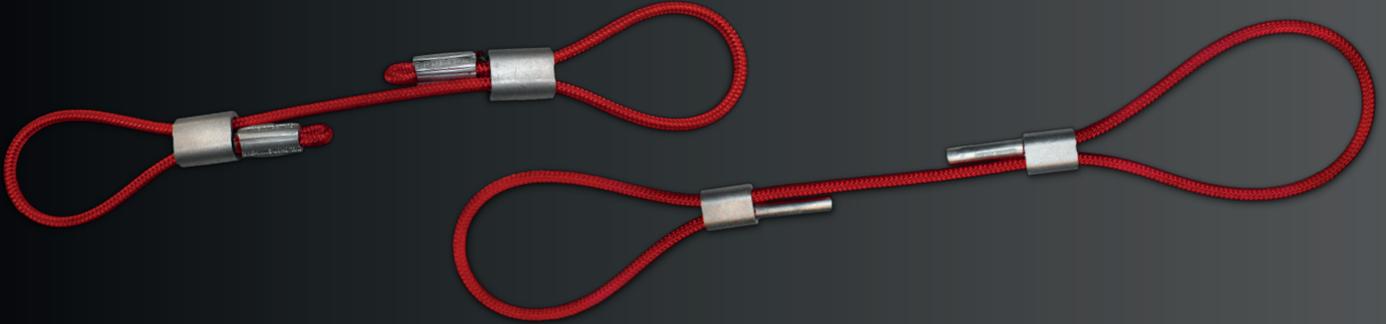

Step 1

Pulling the ferrule down, simply insert the hose into the loop of the whipblock (repeat with the other part of the hose's - or coupling's - connection)



Step 2

Push the unpressed ferrule towards the hose, repeat with the other side of hose



Step 3

Fully stretch the whipblock sideways, pull the ferrule completely up till it's fully chocked.